

Nano One Flat Fix Trimless Installation Manual


Step 1: Make cutout in ceiling with hole saw cutter. The ceiling thickness should be 10 to 12 mm.

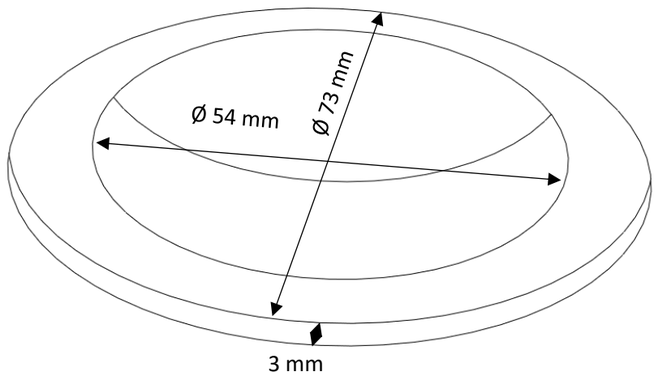


Step 2: Insert the trimless ring into the cutout and secure with a screw.

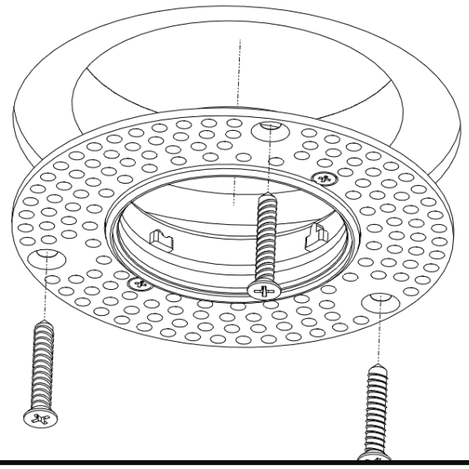

Step 3: Plaster over Joints.

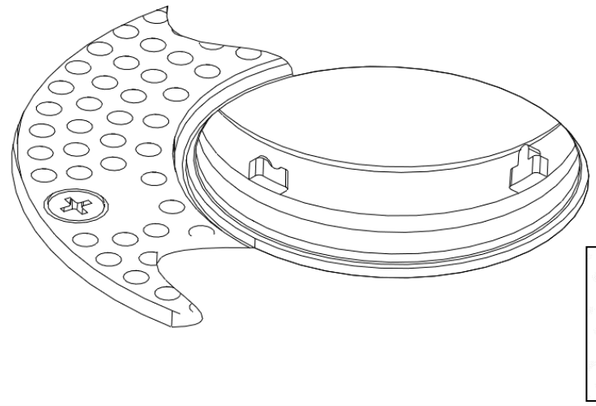


Step 4: Then ensure inside trimless ring clean.

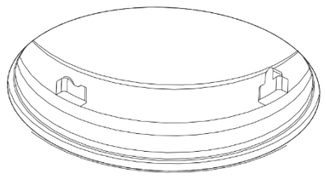





Step 5: Carry out painting.

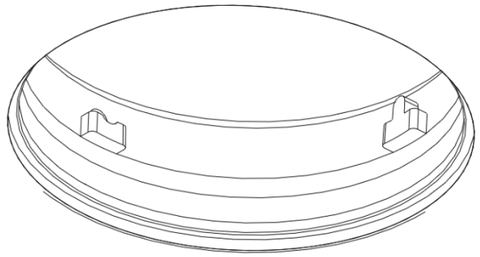


Step 6: Take out main supply cable through cutout.

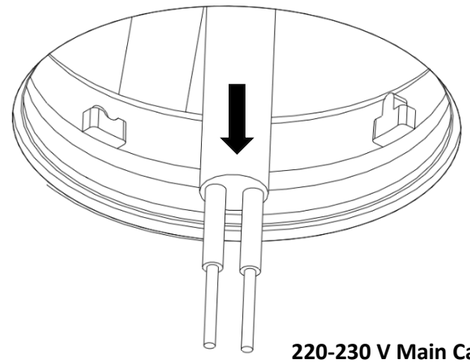


Step 7: Connect the main supply cable to the driver.

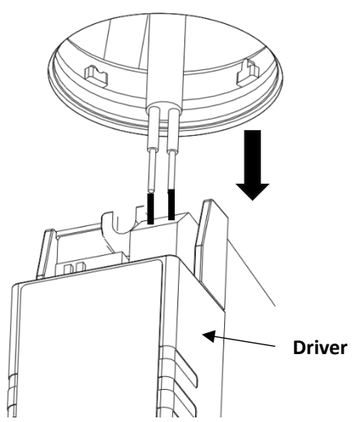

Step 8: Connect the fixture to the driver with the help of a quick connector.

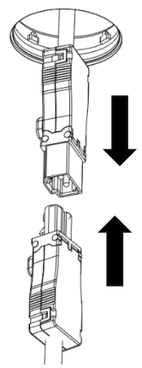


Step 9: Insert the fixture into the trimless ring

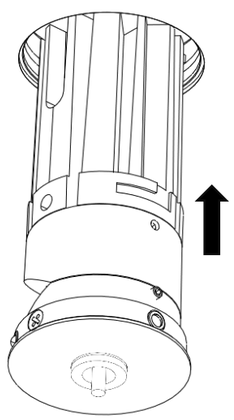


Date: 20.12.2025/ Rev:00


Step 10: Installation completed.

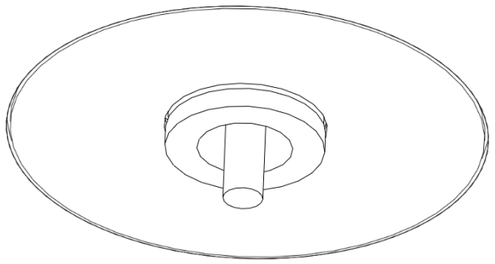

Step 11: Hold the fixture and remove the security plug from the fixture. Before light ON remove the security plug.

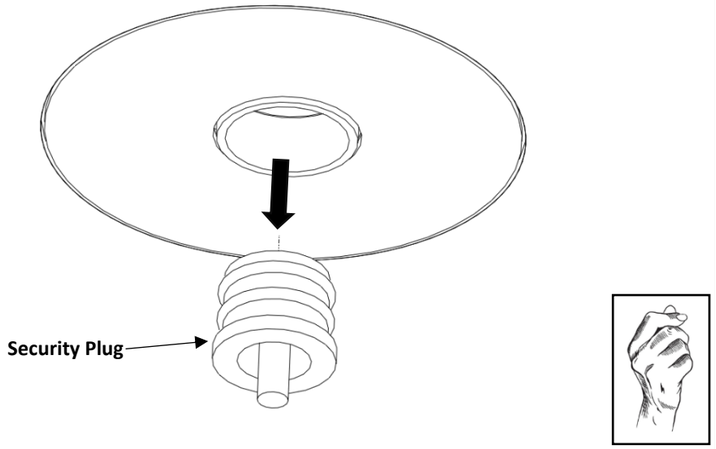


Step 12: For the adjustable, insert the tool into the cap. Adjust the fixture

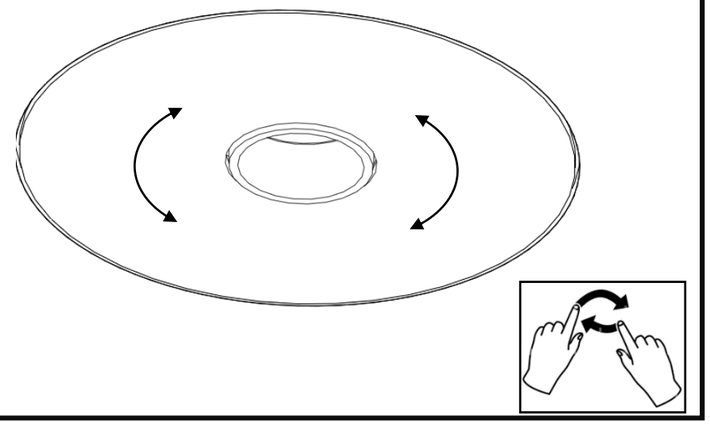

Maintenance Instruction

Step 13: Insert the security plug into cap.

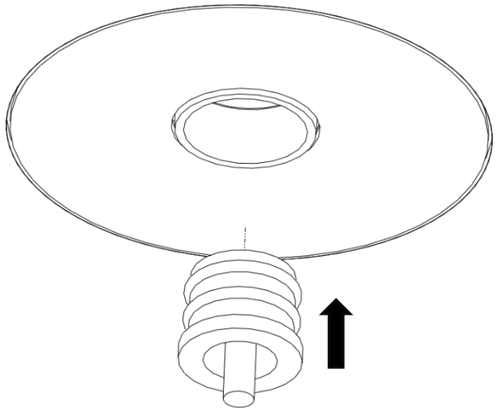

Step 14: Then pull the engine from the ring. If maintenance is done, then insert the engine into the ring.

