

Perdu Recess and Deep Recess Installation Manual


Step 1: Ensure the main power is turned off. Make a cut out of 43mm diameter in ceiling.

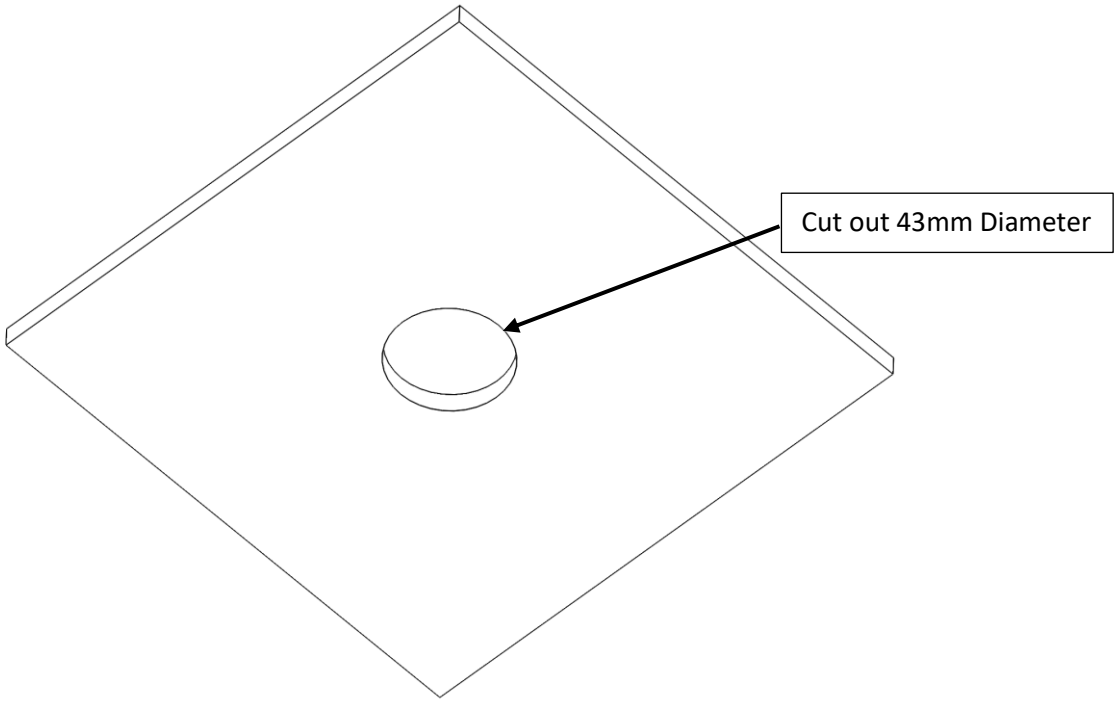

Step 2: Pass the driver and fixture through the cut out.

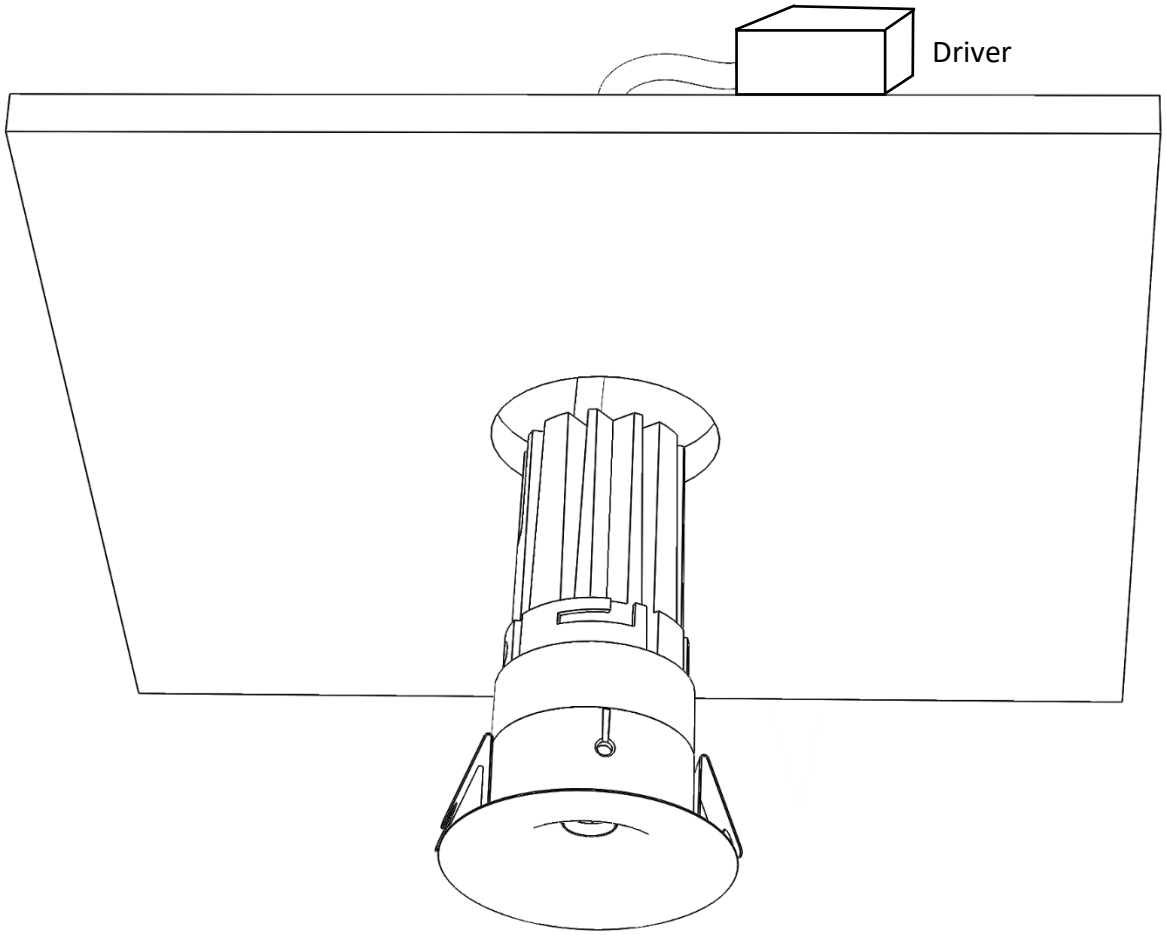

Step 3: After the installation is completed remove the silicone cap.

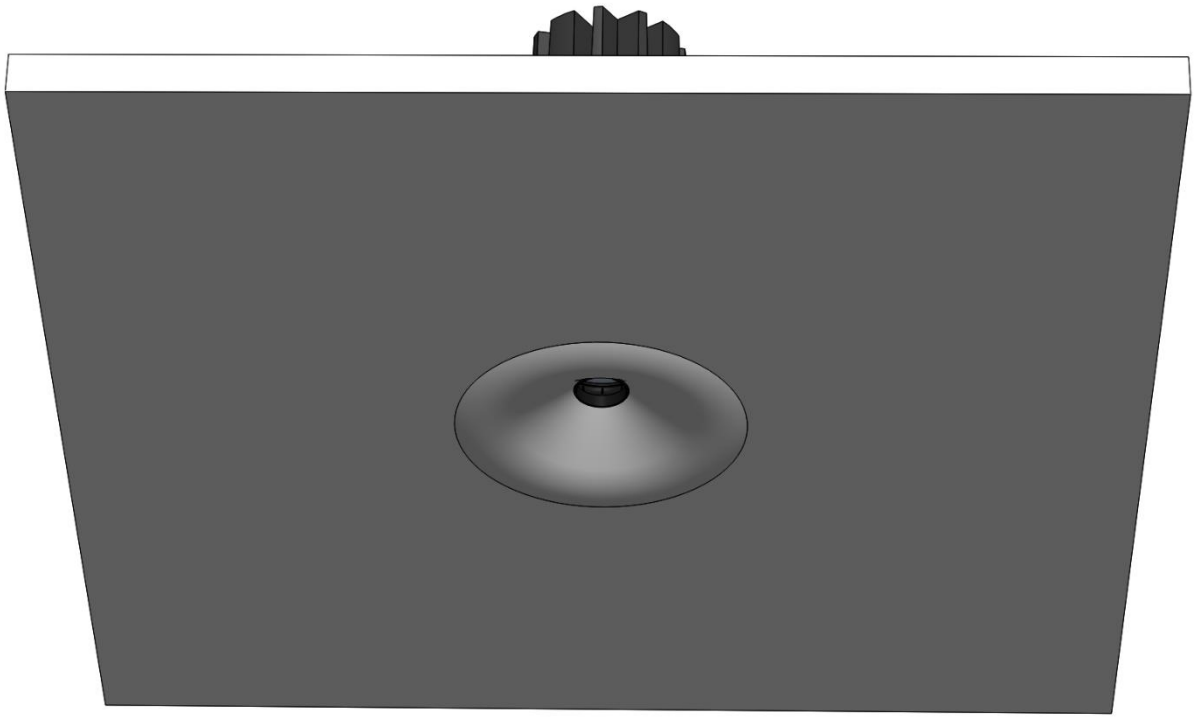

Installation is complete. Lights can be Turned On!