

Opti Large DL+WW Recessed Installation Manual

Step:1

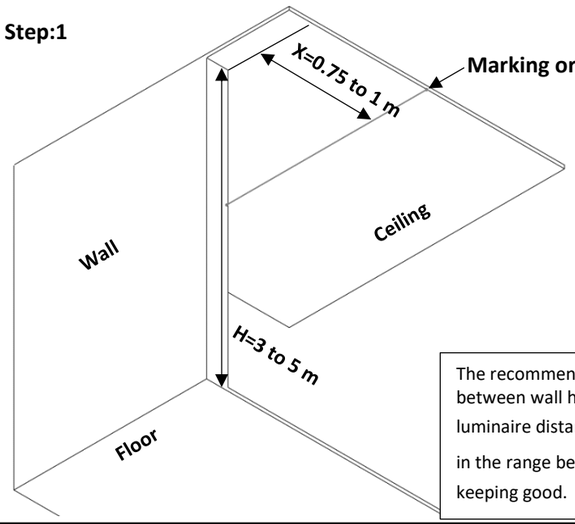


The recommended relation between wall height and luminaire distance to the wall $\frac{H}{X}$ is in the range between $\frac{3}{1}$ **and** $\frac{5}{1}$ by keeping good.

Step:2

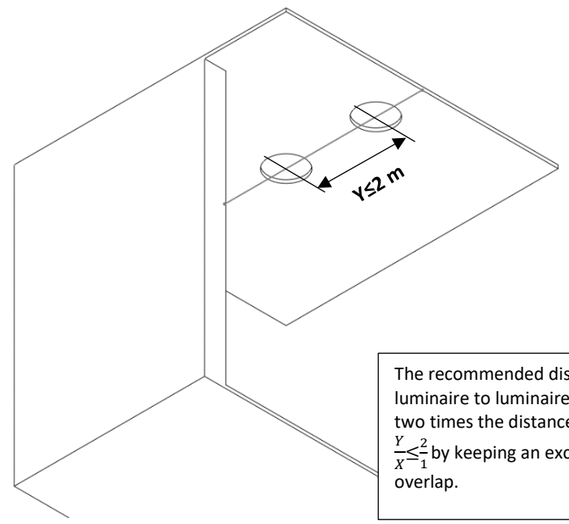


The recommended distance form luminaire to luminaire is less than two times the distance to wall $\frac{Y}{X} \leq \frac{2}{1}$ by keeping an excellent overlap.


Step:3 Make cutout on ceiling as per step 1 and step 2.

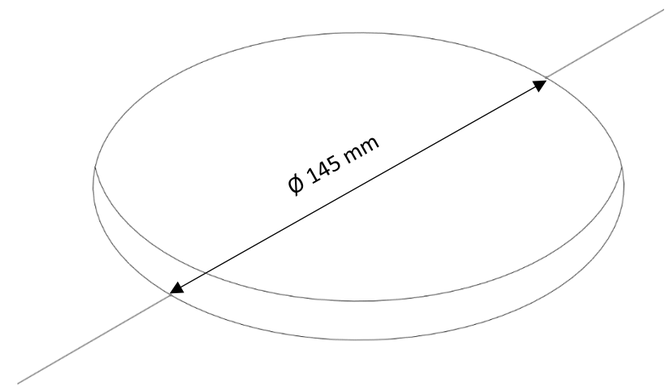


Step:4 Connect the main supply cable with Driver.

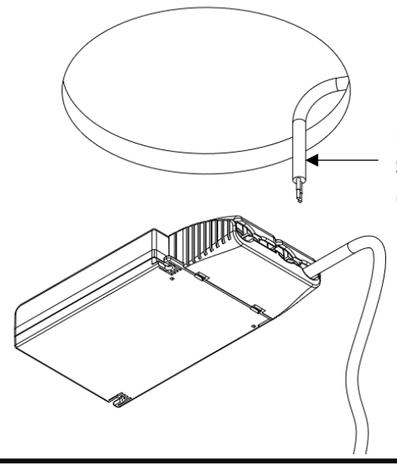


Step:5 Then connect the driver and fixture with help of quick connector.

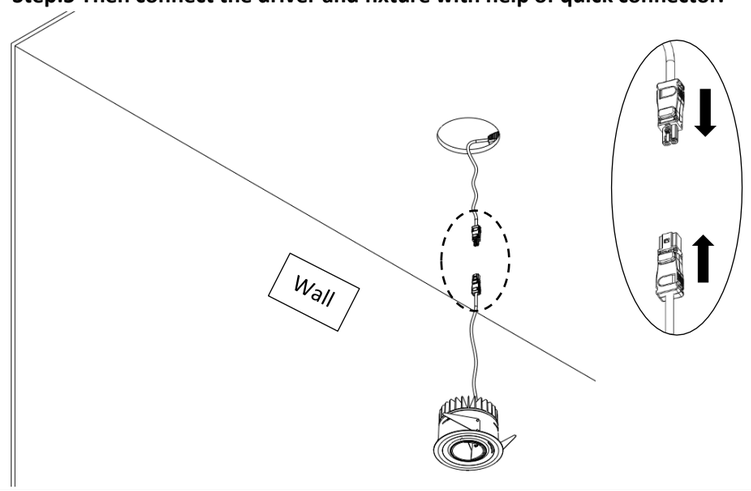


Step:6 Insert the fixture into the cutout, and check the reflector orientation against the wall as shown in the image below.

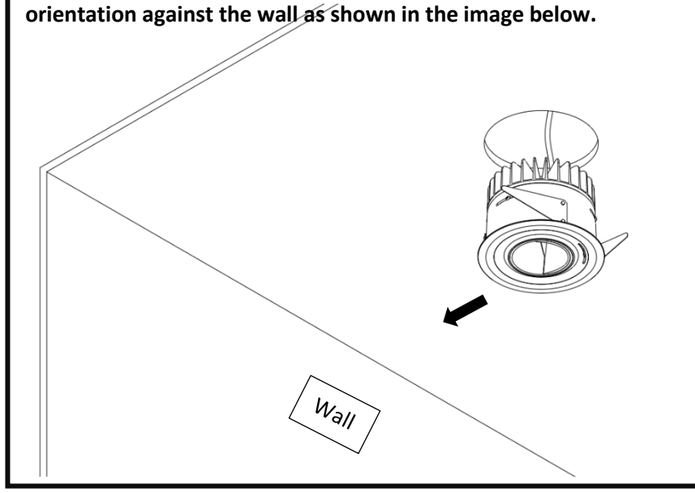


Step:7 Press the toggles for insert into cutout.

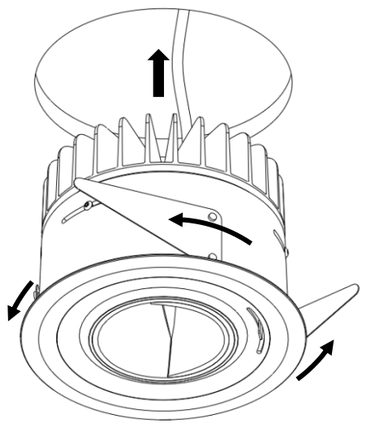

Step 8: Installation is complete. The lights are ON. If you need to adjust the lighting to cover the wall properly, you can adjust the alignment part with your finger up to ±20°.

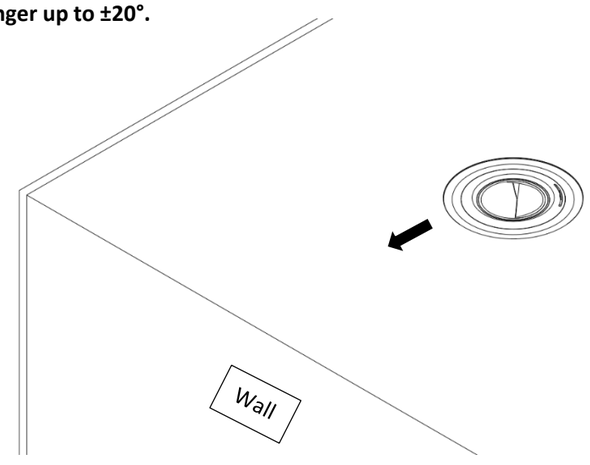

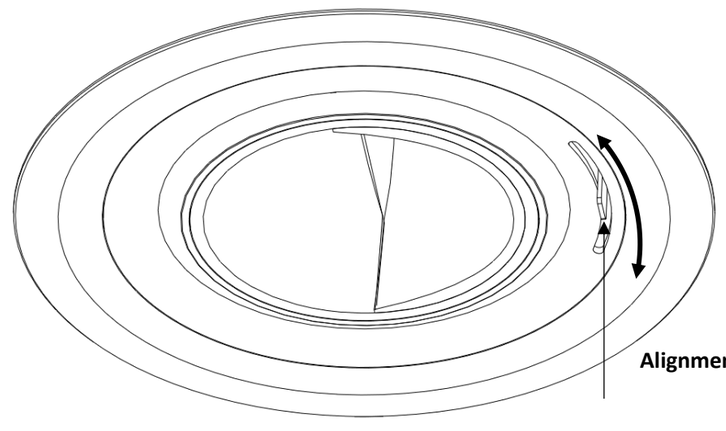

Date:- 02.02.2025 / Rev-00