

Perdu Trimless DL Installation Manual


Step 1: Make a cut out of 40mm diameter in ceiling.

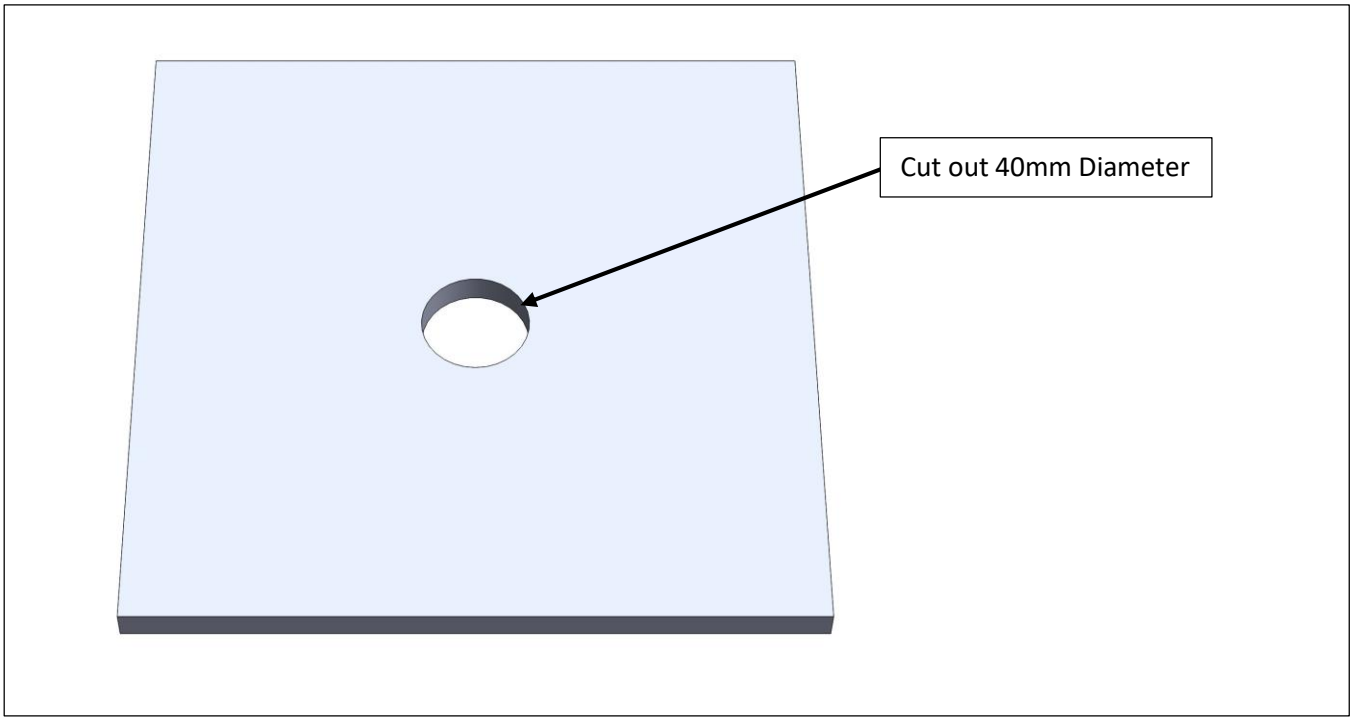


Step 2: Pass the driver and fixture through the cut out

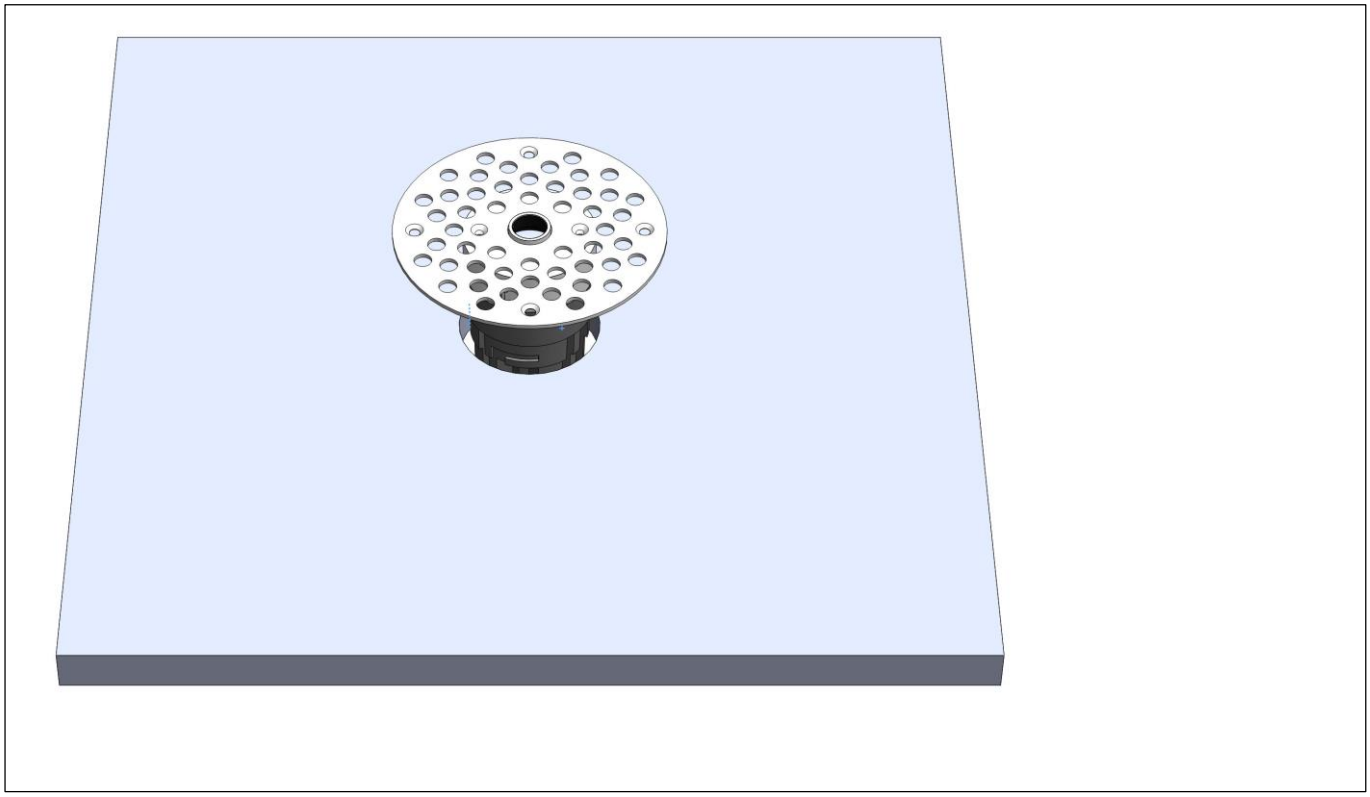


Step 3: Fix the fixture to the ceiling with the help of screws as shown in figure below and also make sure the screws are at the same level.

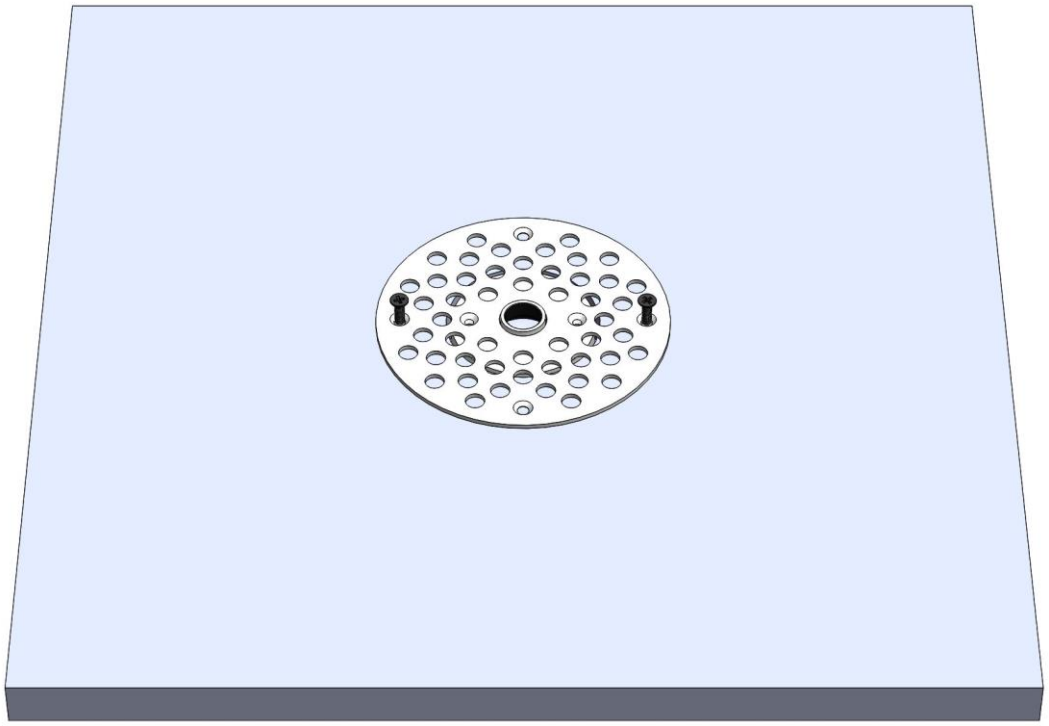


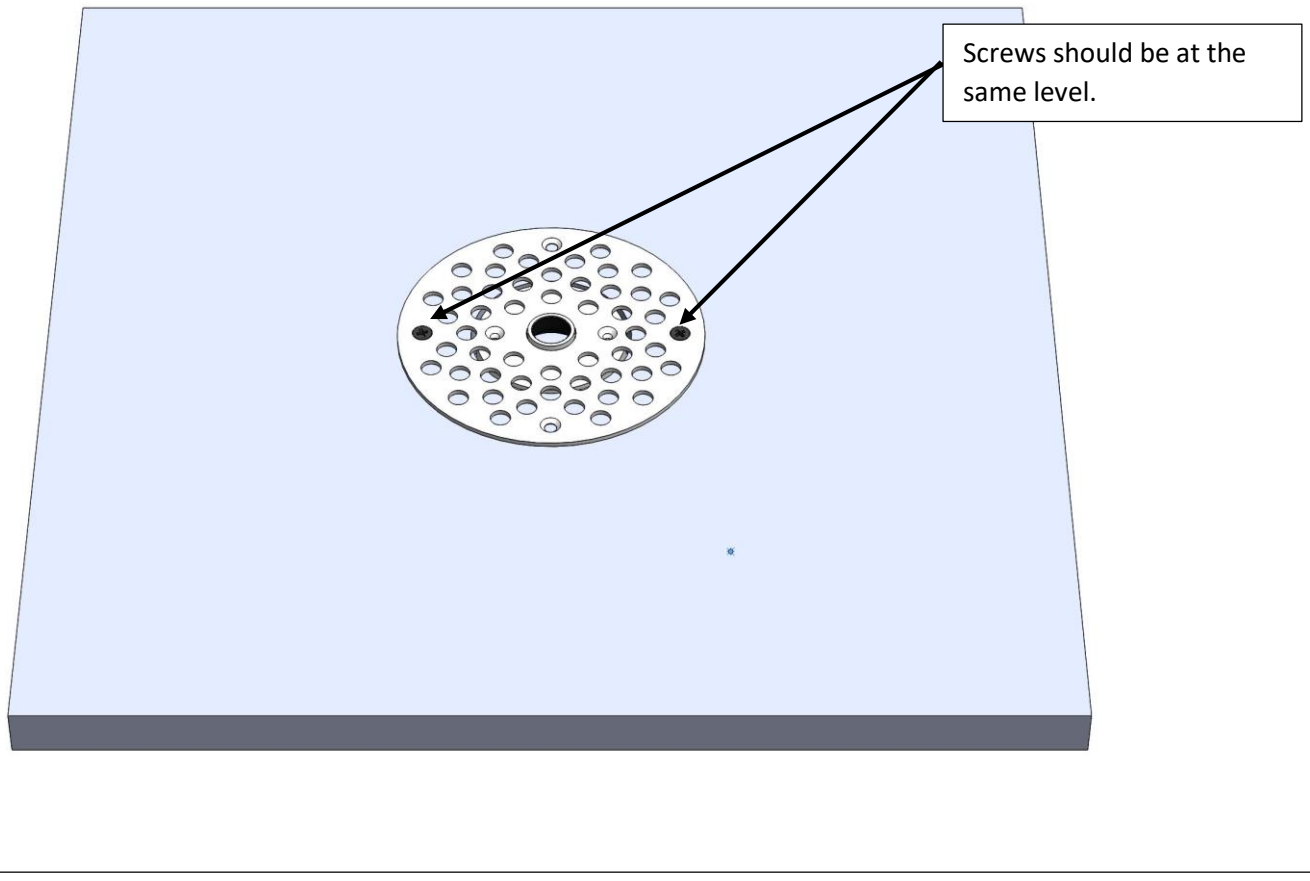

Step 4: Finish the POP ceiling with POP/Putti and take care that POP/Putti doesn't enter into the CFO Black Cap as it will create glare

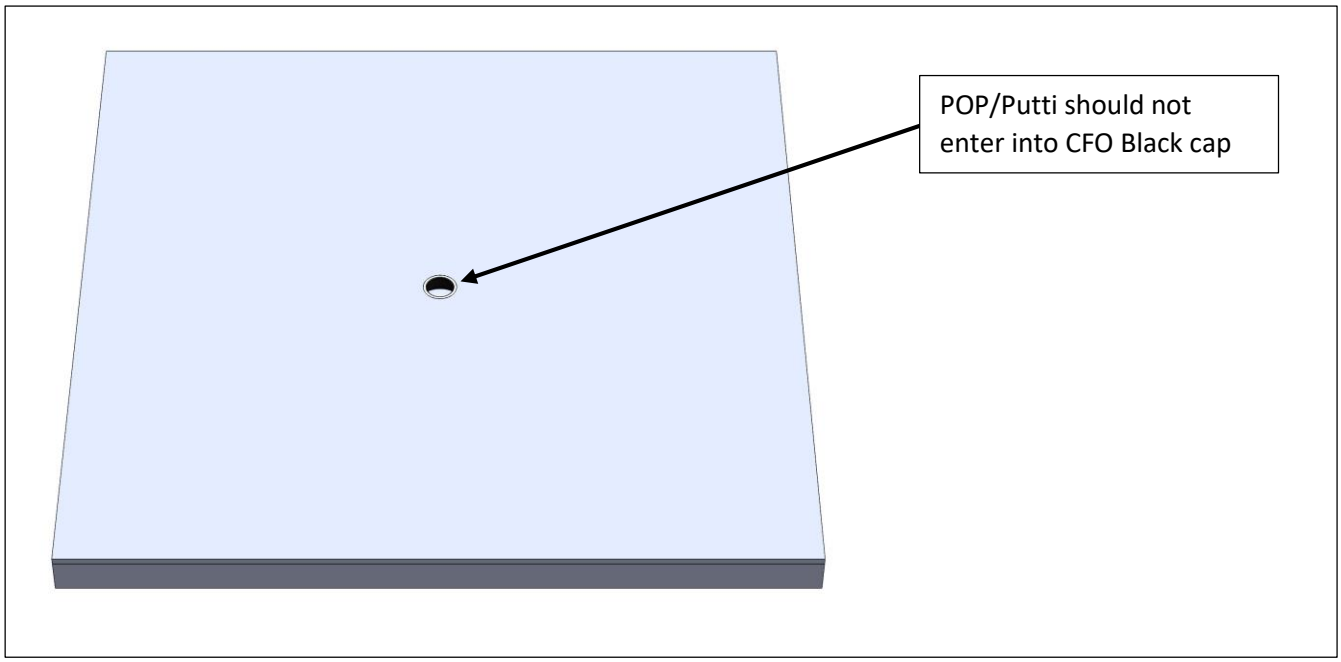

Step 5: Remove the silicon plug which covers the CFO cap and Installation is complete. Light can be turned ON!

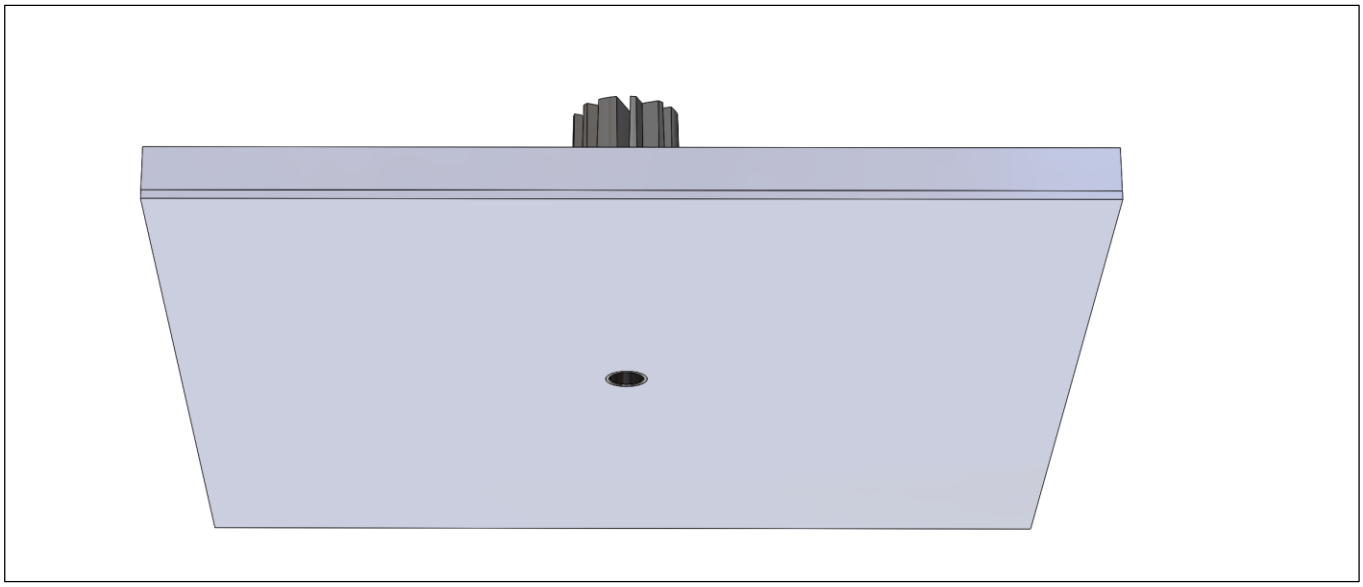

DO's & DONT'S

*** POP / PUTTY COATING SHOULD BE AT THE SAME LEVEL AS THE RING / CAP OF THE LIGHT FIXTURE**

*** KINDLY ENSURE THAT THE POP / PUTTY THICKNESS SHOULD NOT SINK THE RING / CAP INSIDE THE HORIZONTAL LEVEL OF THE CEILING, IF THIS HAPPENS THE INSTALLATION IS NOT CORRECT.**