

Perdu 4x Linear Trim-less installation Manual:


Step 1: Put a very thin coat of Putty/POP before installing the tile in the ceiling on the highlighted area as shown the image below

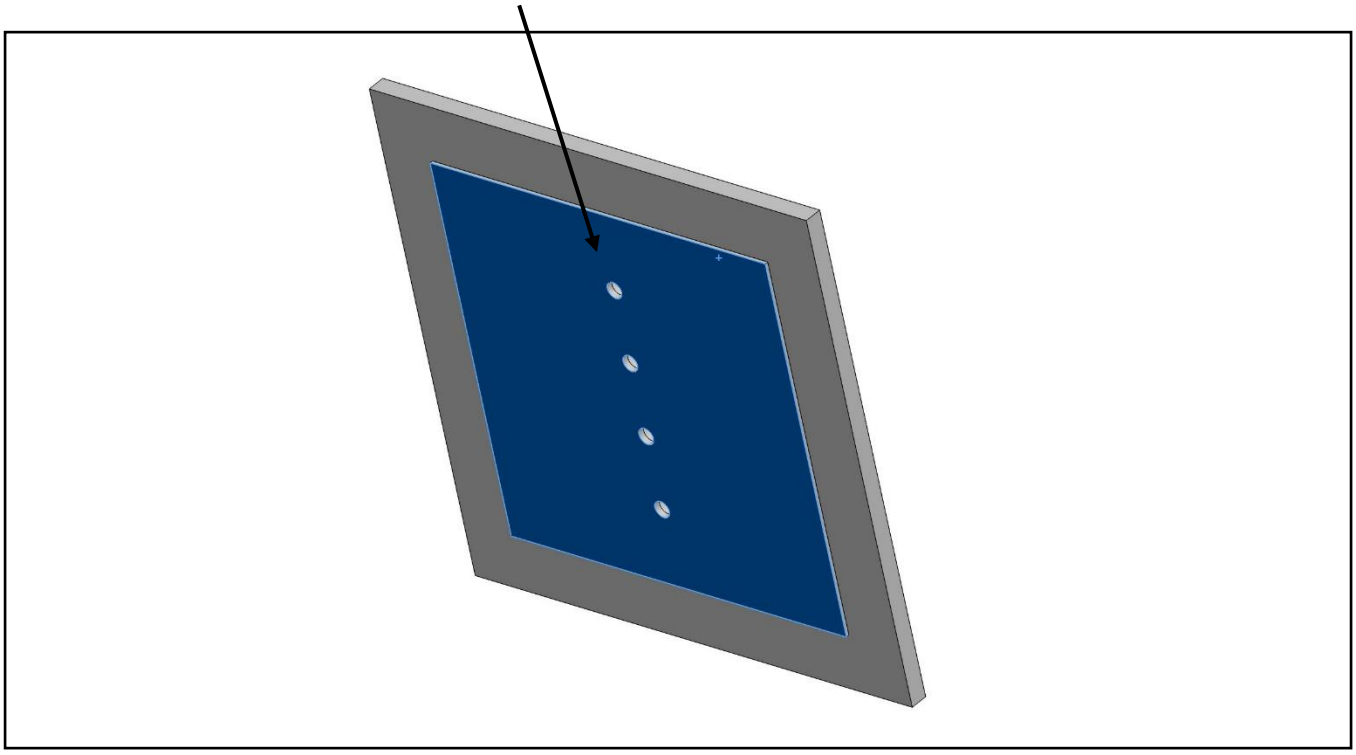


Step 2: Fix the Perdu 4x fixture behind the routed Pop plate with the help of C-clamp and mounting screws

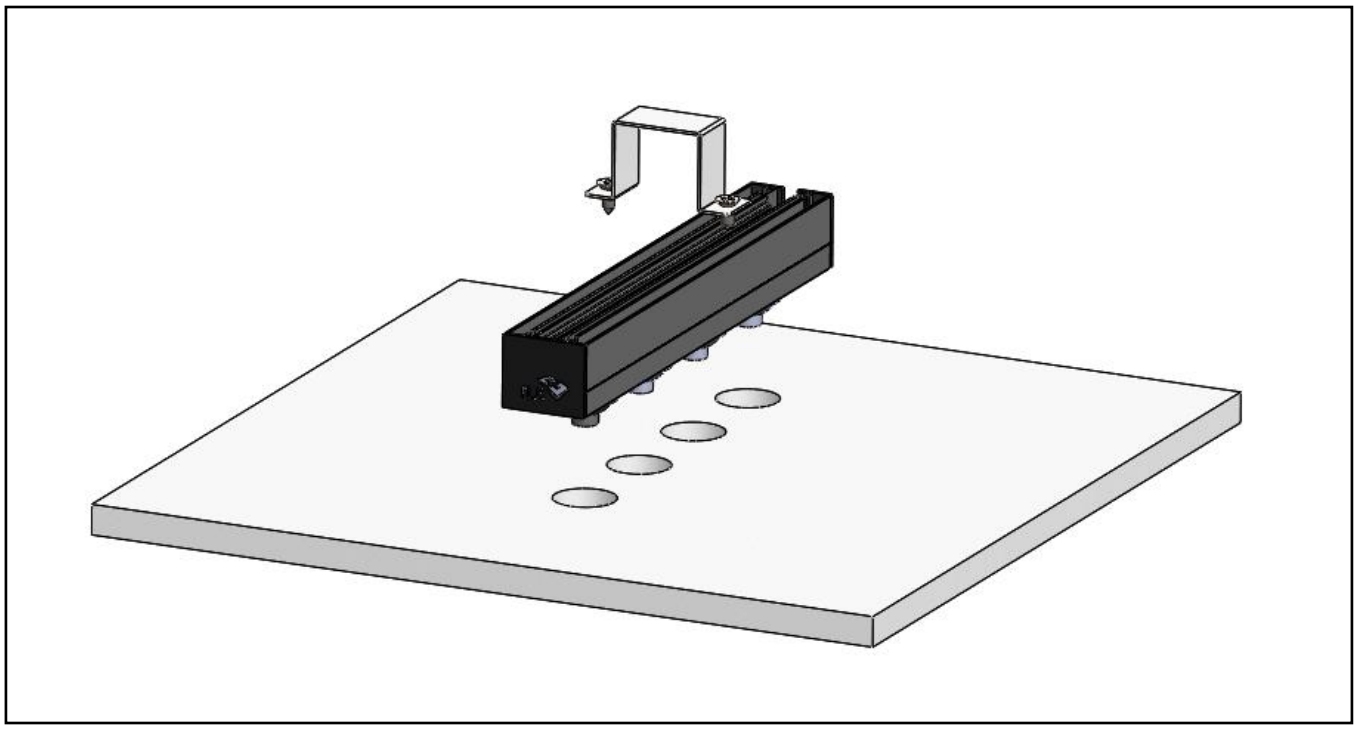


Step 3: Make a cut on the POP ceiling as per routed plate size and make the connection of fixture with the driver placed in remote location. Then Screw the Routed Pop plate with POP ceiling with the help of mounting screws.

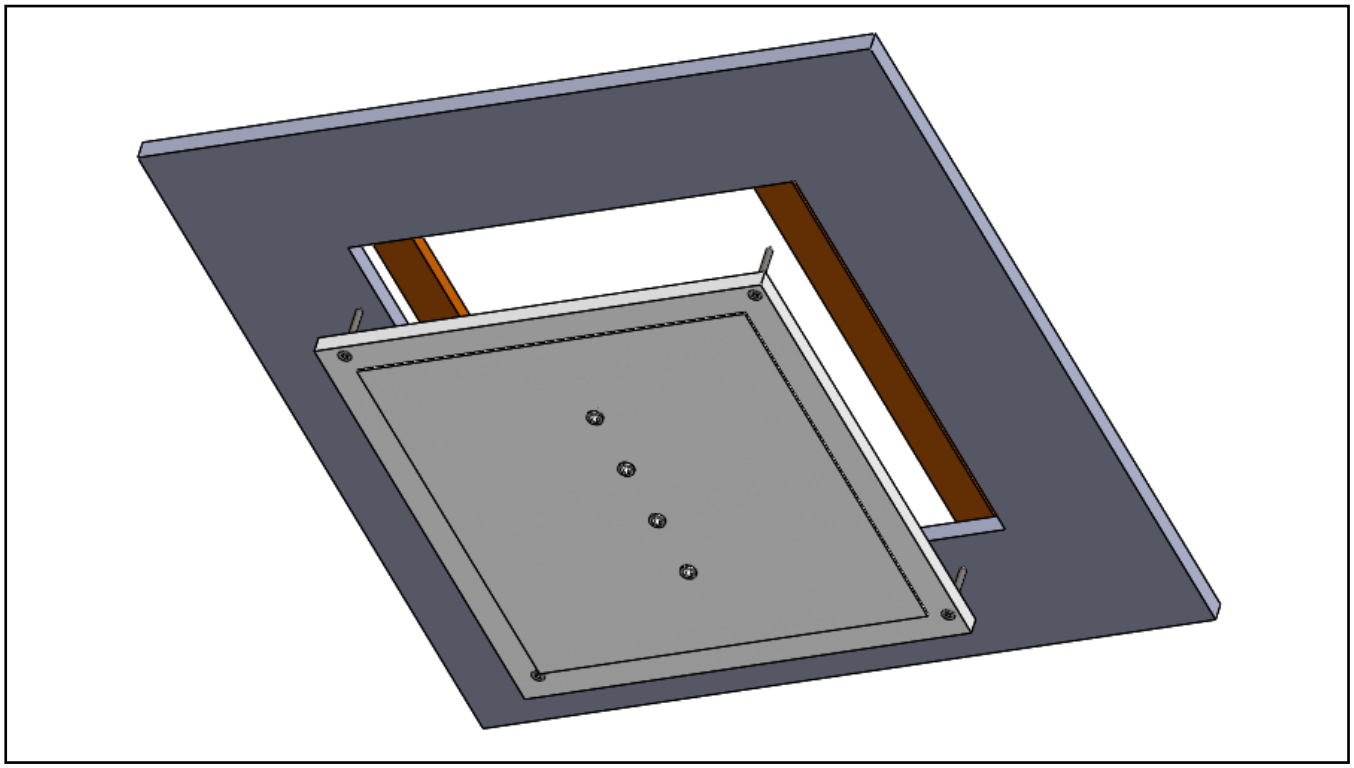

Step 4: Finish the POP ceiling with putti and take care that putti doesn't enter into the CFO black cap as it will create the glare

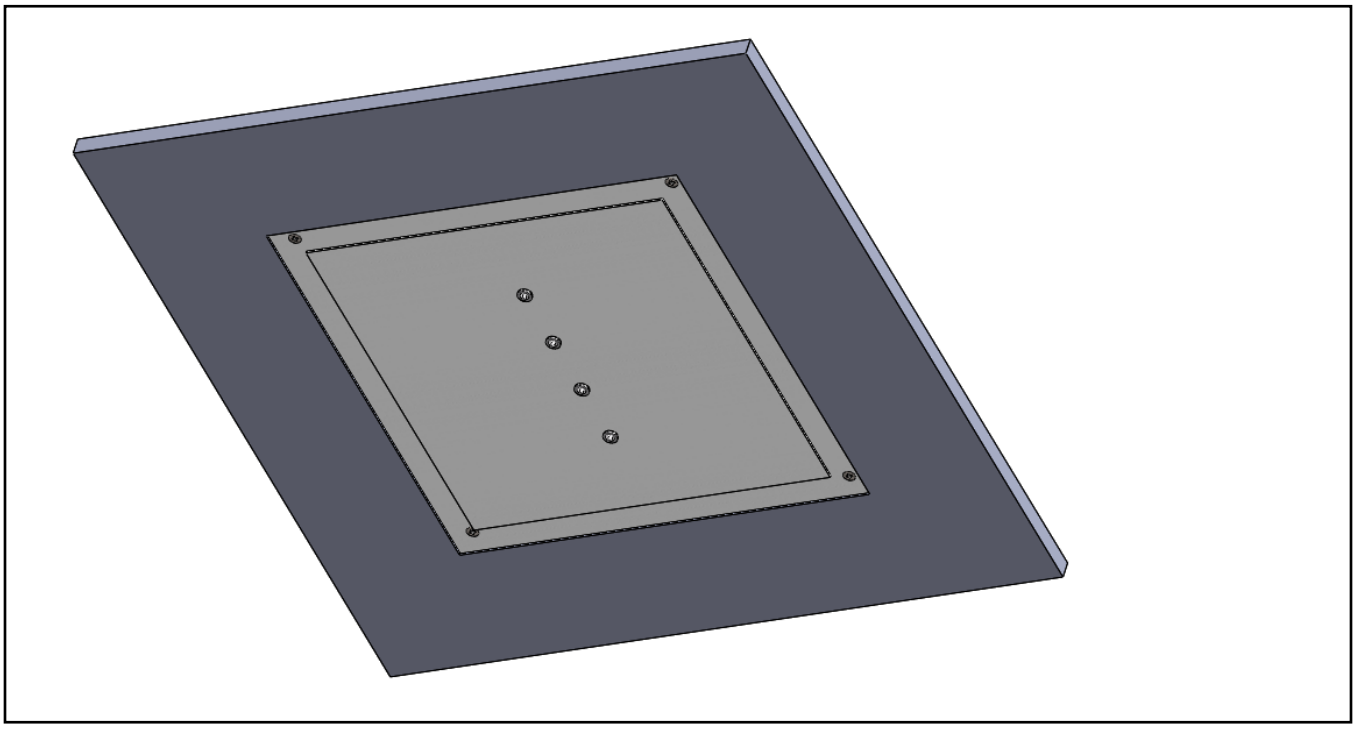

Step 5: Remove the silicon plug which covers the CFO cap and Installation is complete. Light can be turn ON !

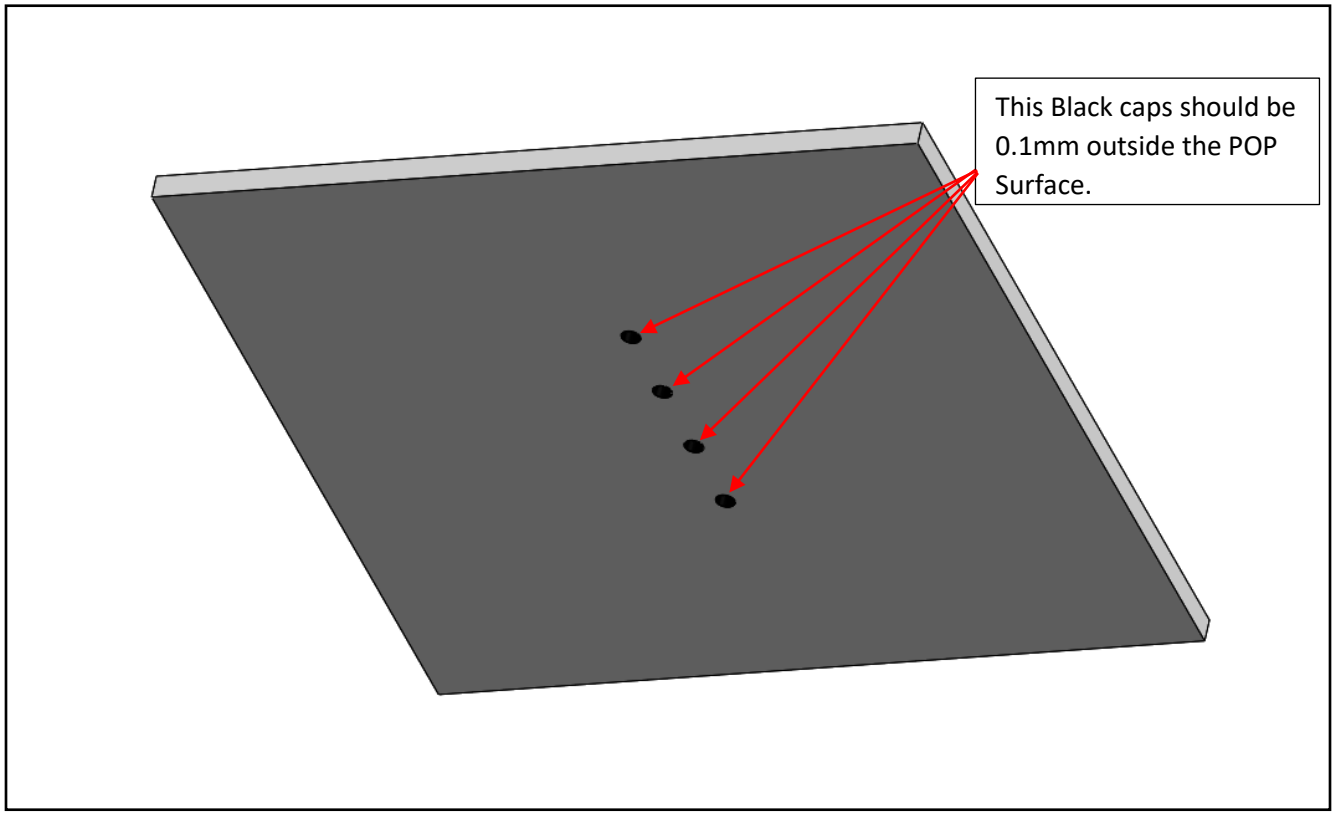

DO's & DONT'S

*** POP / PUTTY COATING SHOULD BE AT THE SAME LEVEL AS THE RING / CAP OF THE LIGHT FIXTURE**

*** KINDLY ENSURE THAT THE POP / PUTTY THICKNESS SHOULD NOT SINK THE RING / CAP INSIDE THE HORIZONTAL LEVEL OF THE CEILING, IF THIS HAPPENS THE INSTALLATION IS NOT CORRECT.**