

Axis-M_ Trimless INSTALLATION MANUAL


Step 1: Cut out of Diameter 110.5mm in the ceiling as shown in the below figure.

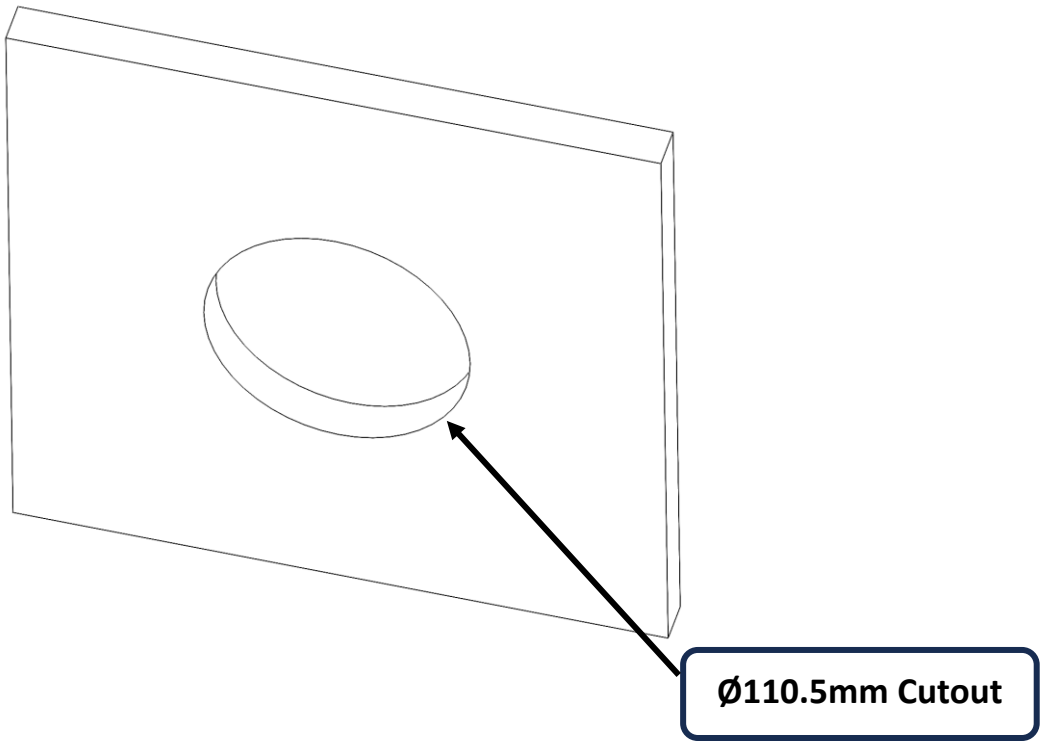


Step 2: Insert the Frame in cutout and fix with help of screw

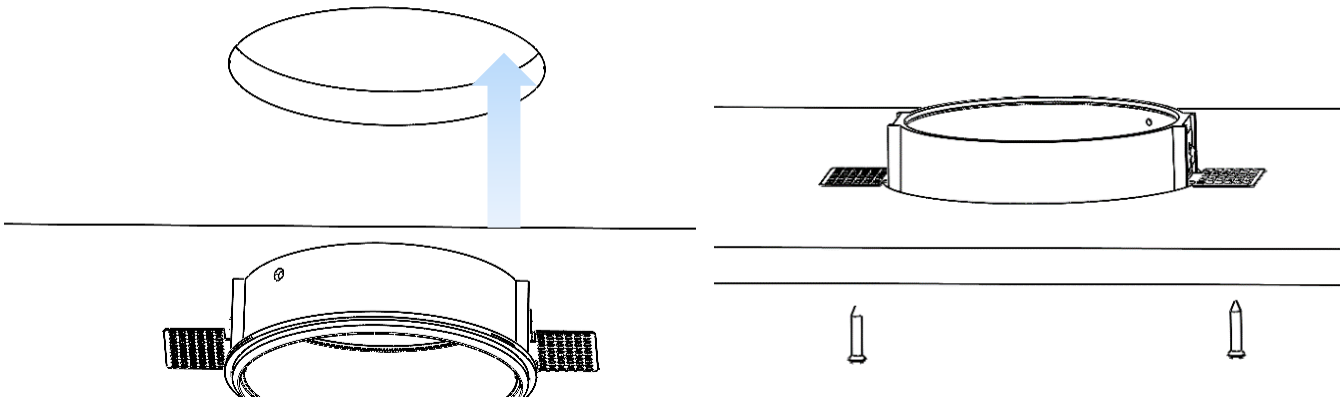


Step 3: When We screwed then after apply POP Wall Putty on visible screw area.

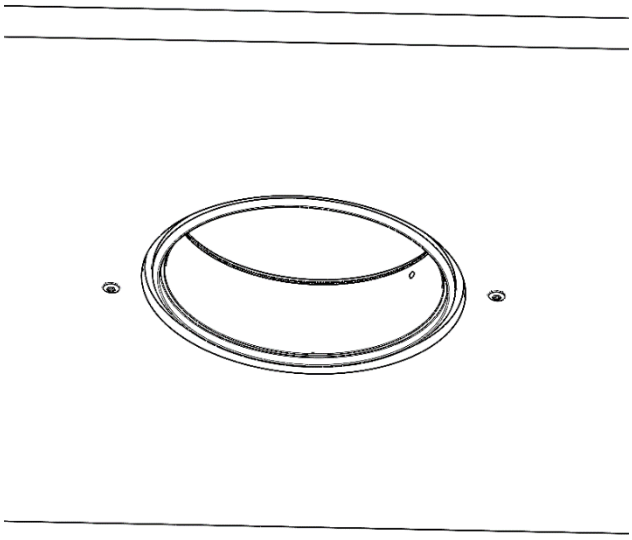


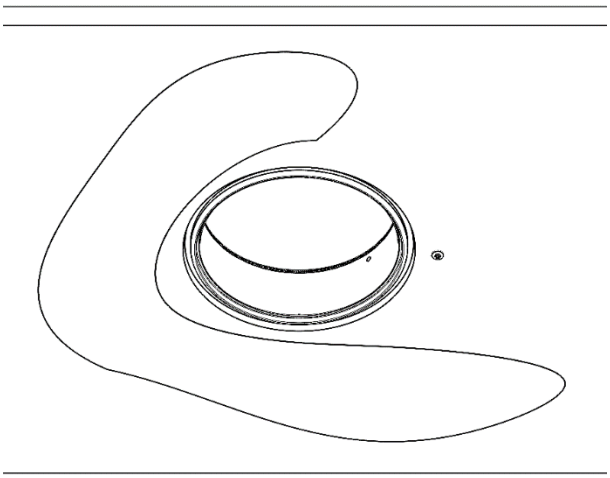


Step 4: Connect the fixture to the driver and ball plunger lock it to the frame as show in figure.

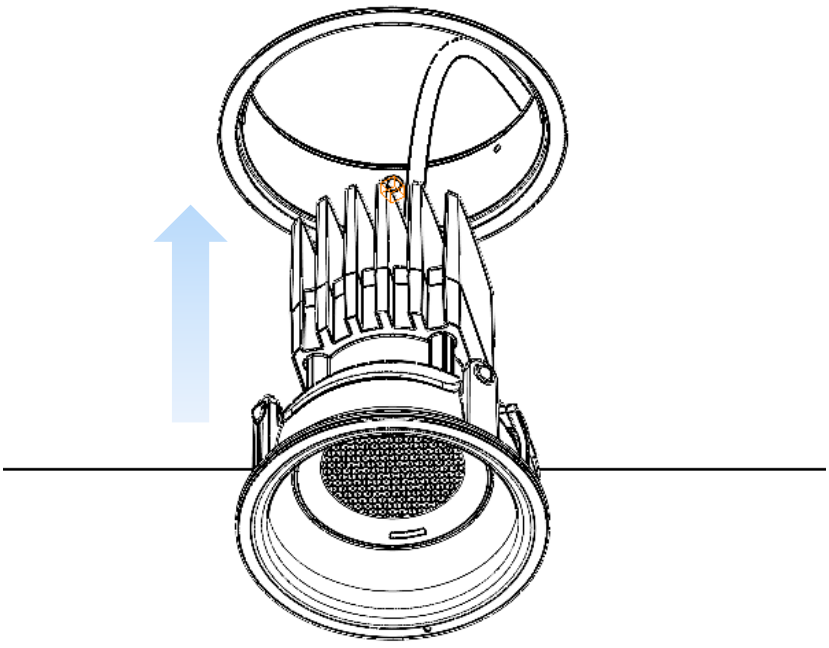



Step 5: For Adjusting the fixture angle, first remove the cap as shown in figure.

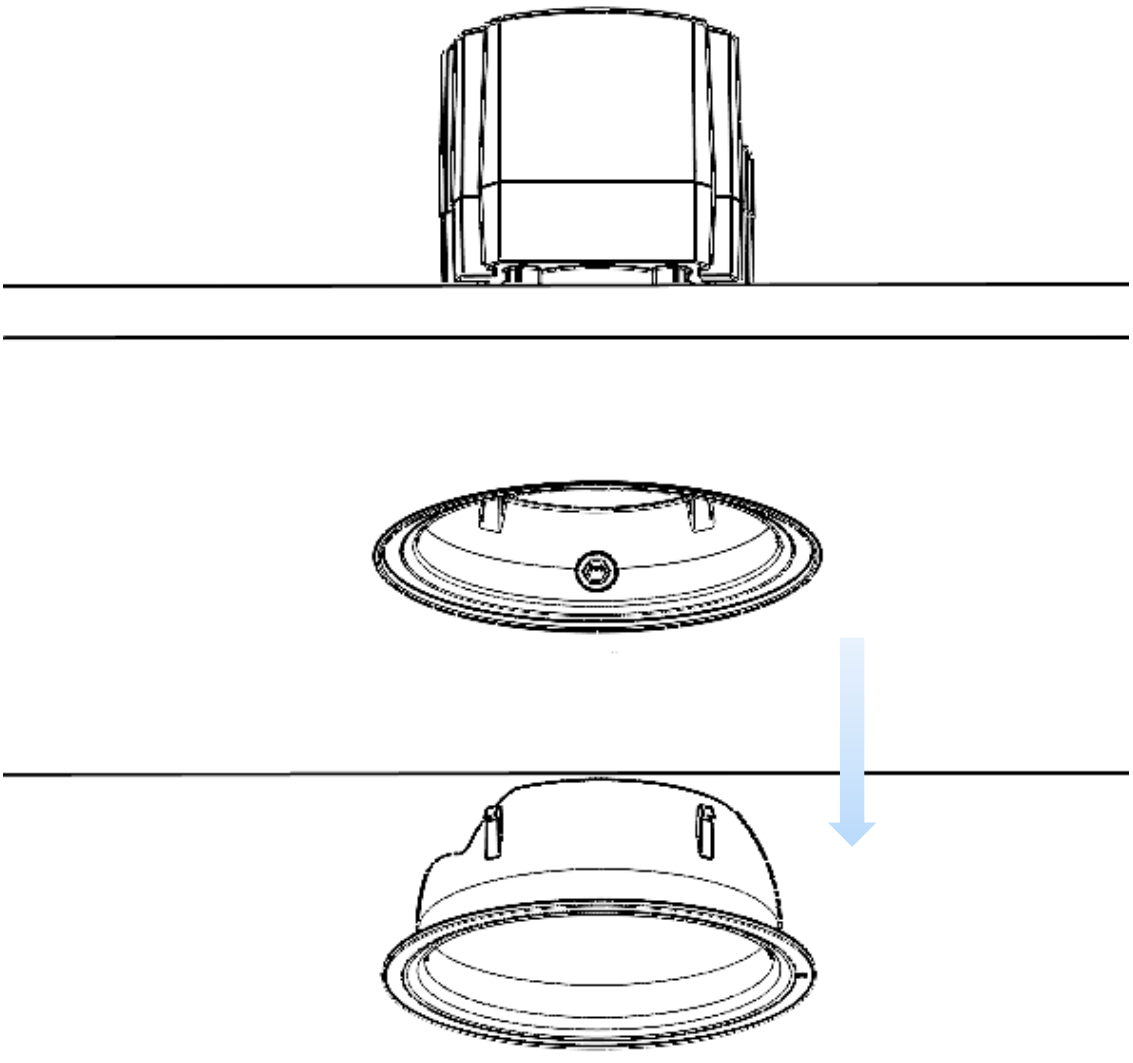


Step 6: Just insert the Allen key(M5) in given slot and rotate as per required tilt angle shown in figure.

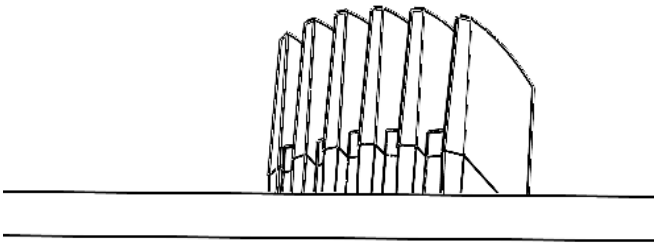


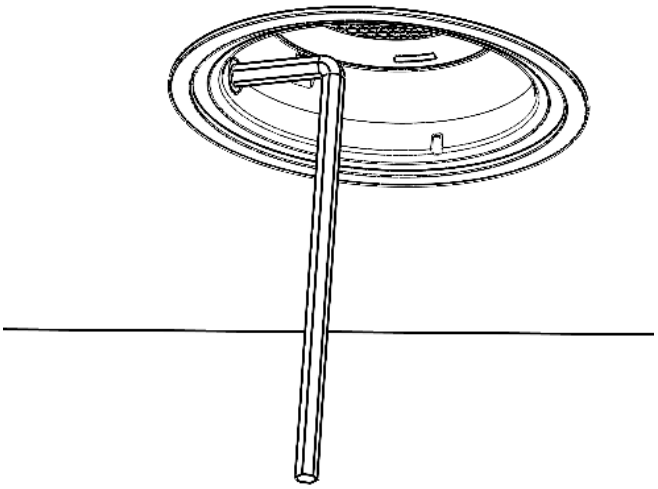


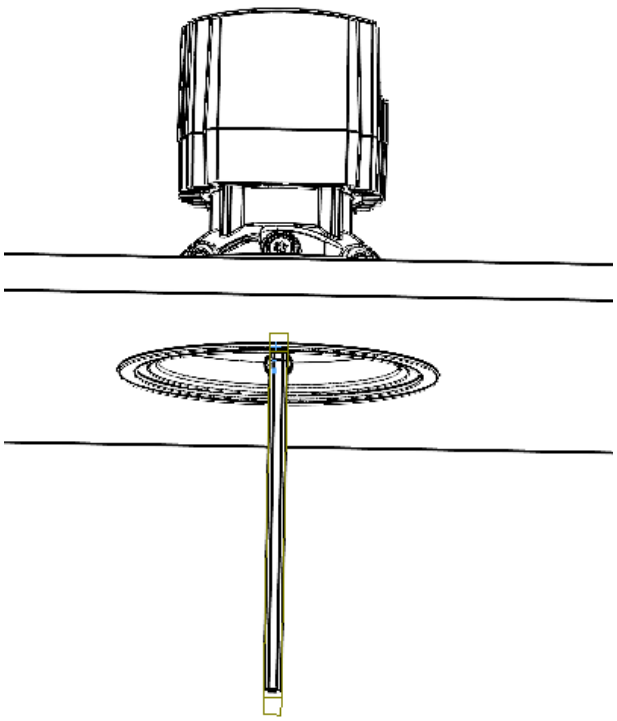


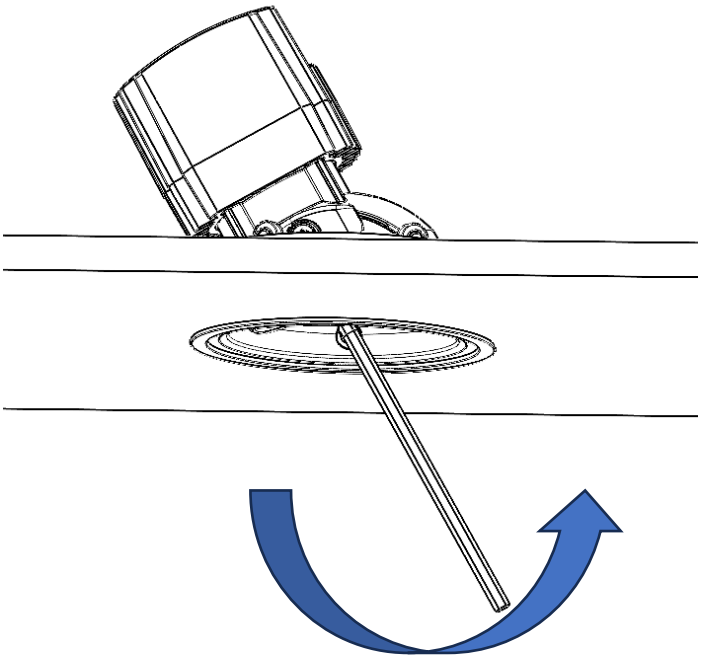


Step 7: After tilted fixture we can rotate 358Deg as per requirement shown in figure.

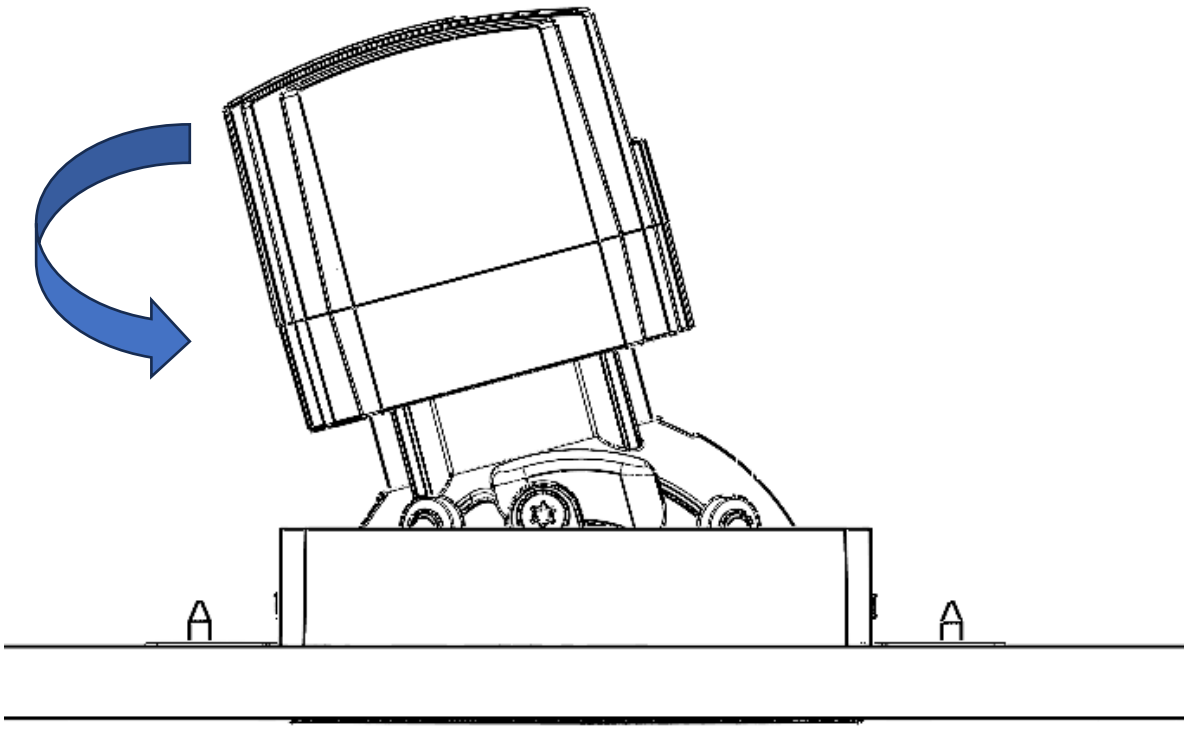

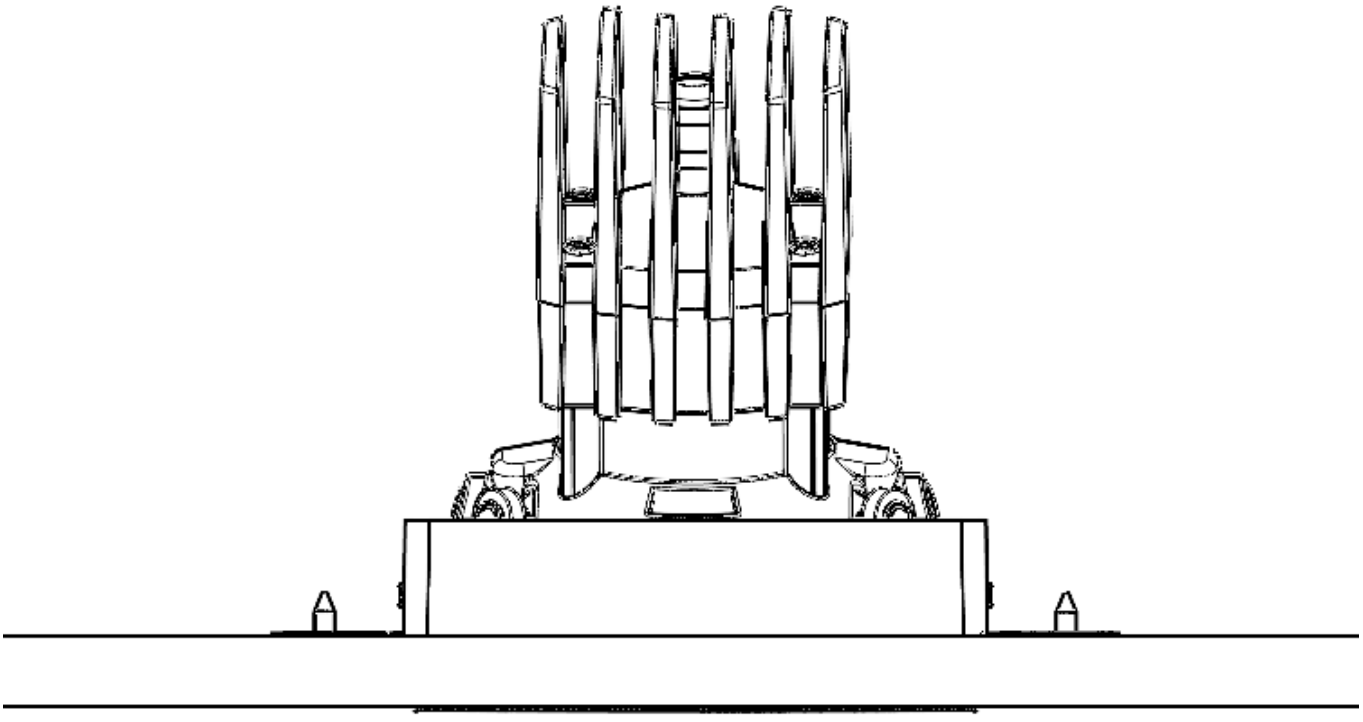

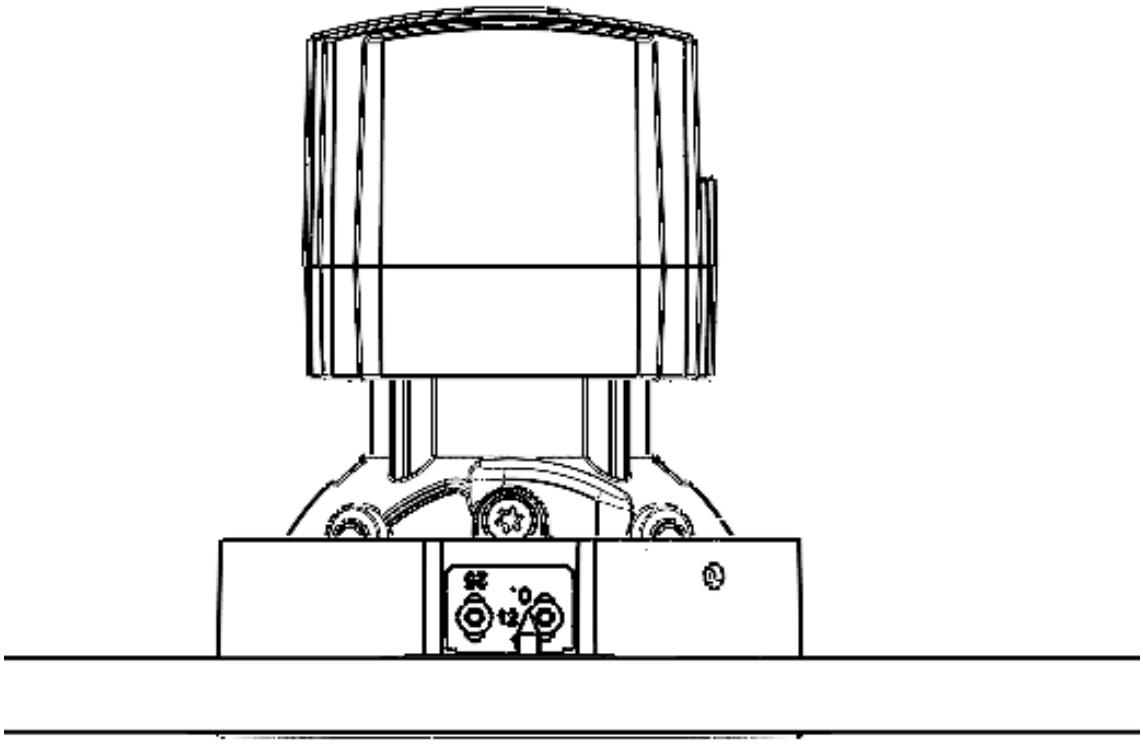

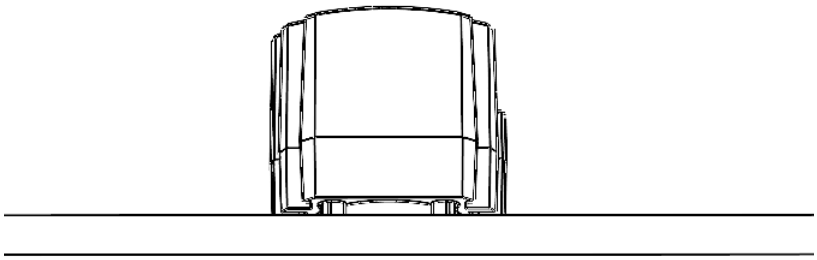



Installation completed. The lights can be turned on!