HEWEN 2X RECESSED- INSTALLATION MANUAL

Step 1: Make Cut-out on Ceiling As per Shown in Fig.1.

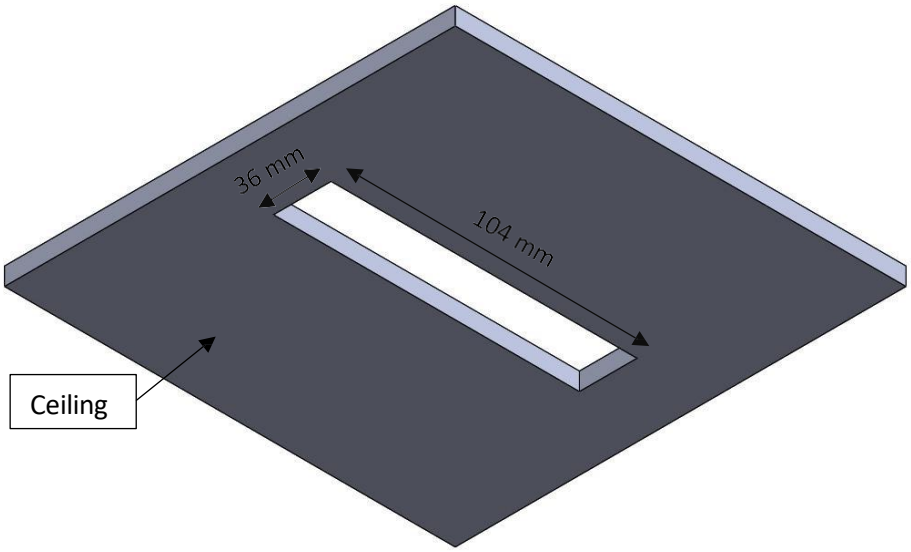


Fig.1

Step 2: To up the Both Torsion Spring on Fixture as shown in Fig.3


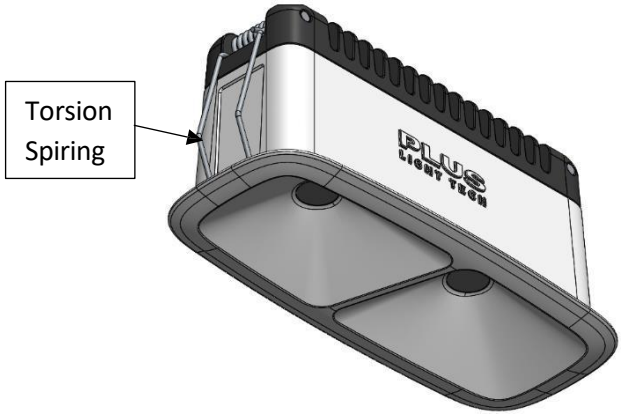


Fig.2



Fig.3

Step 3: Insert the driver through the cut out and connect the fixture with driver with the help of quick connectors attached to the wires of driver and fixture.

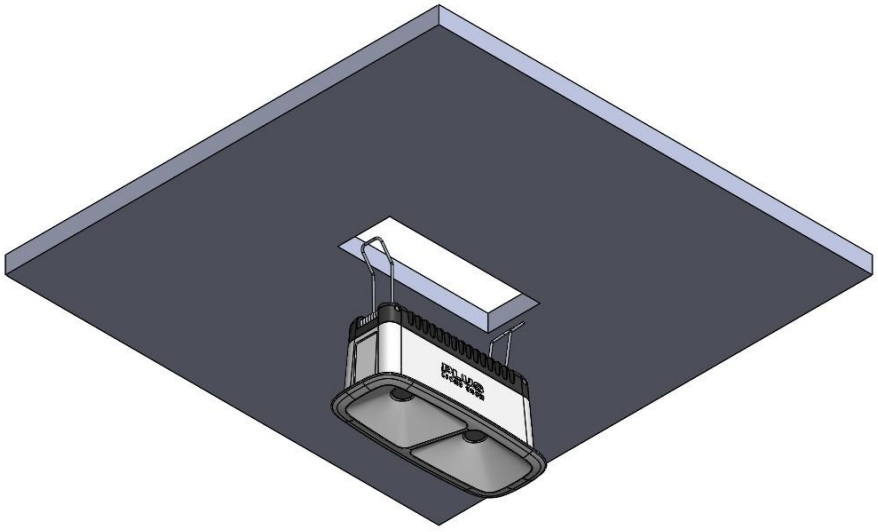

Step 4: Both Torsion springs Release to original position and fitted with ceiling.

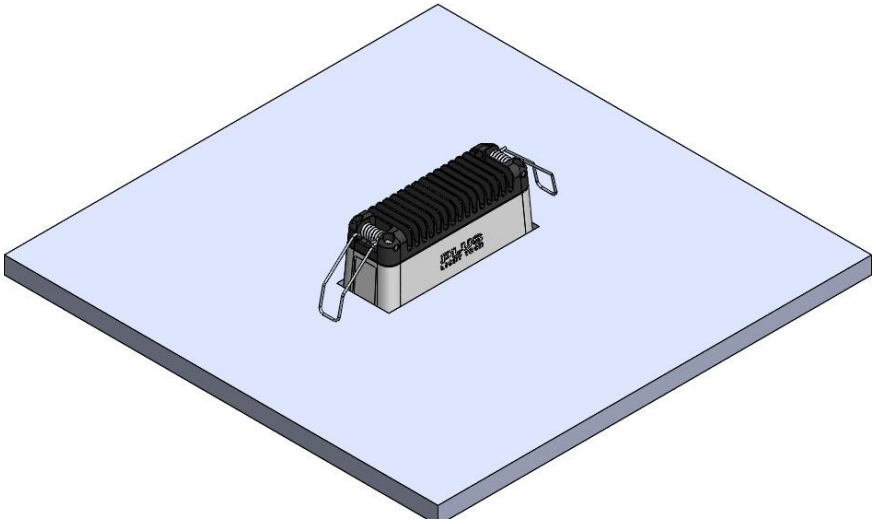


Fig.5

Installation is complete. Lights can be Turned On!

Additional Note: For purpose of maintenance remove the fixture by Pulling the recessed frame as shown in Fig.6

